



FITTING INSTRUCTIONS

The Fort Scalloped – This canopy has a Dual-Pitch canopy and authentic Riven Slate roof.



- Establish and mark on the wall, the centre line of the door and desired height for the bottom of the soffit.
- Mark the centre line on the soffit of the canopy.
- **Ensure the mounting surface is plumb, level and smooth.**
- Mark out and pre-drill 3 to 9 holes (dependent on size of canopy) with 6mm holes along the back flange of the canopy.
- Offer soffit to wall, matching centre point of soffit to marked centre line on the door reveal. **Check the canopy is level & plumb using spirit level and pack with frame packers if needed.**
- With the soffit held in position, mark centre points of fixing holes on wall through pre - drilled holes in the back flange section of the soffit.
- Remove soffit from wall.
- Drill 6mm diameter mounting holes in wall to required depth.
- Offer soffit to the wall, ensure centre lines match and place m8 wall bolts, 6x 80 hammer fixing or screws in timber grounds in drilled holes and then tighten.
- **Check with spirit level if the soffit is level on the width and projection, if not loosen the fixings were required and pack with frame packers to get the soffit level and plumb and then re tighten the fixings.**
- Now mark and pre drill between 3 to 6 holes with 6mm drill bit along the back flange of the roof for the canopy.
- Offer the roof to the soffit with Bigheads (Georgian ,Roman) or the flange on the underside of the roof (Combination).
- Press the roof down flat onto the soffit and drill through the pre drilled holes on the back flange of roof into the wall and place m8 wall bolts or 6 x 80 hammer fixing in drilled holes. **Before tightening you may have to pack out the back flange dependant on the surface of the wall or else the level of the whole unit may be disturbed**
- Silicone mastic on flange of canopy to the wall.
- If leg brackets are to be fit, in the centre of each end of the flat section on the bracket carefully mark and drill 6ml holes
- Offer the leg brackets to the desired position on each side of the canopy and mark hole position on the wall and soffit through pre - drilled holes on the bracket.
- Remove the leg brackets and drill the marked positions on the wall only with 6ml drill bit.
- Offer leg brackets to the wall and place plug and screw in drilled holes.
- Cover all visible screw heads with appropriate coloured screwcaps. You can also lead over the flange into the brickwork, completely optional.

Your overdoor canopy is maintenance - free, however we recommend regular cleaning with soap and water to maintain its's good looks for many years to come.

The Internet Shop trading as The Canopy Shop

T: 0345 241 7182 F: 01536 446981 E: sales@thecanopyshop.co.uk www.thecanopyshop.co.uk
Sales Office: The Canopy Shop Unit 13 Earlstrees Court, Earlstrees Industrial Estate, Corby, NN17 4AX

Care should be taken not to stand on the canopy as this may cause cracking or damage to the surface finish.

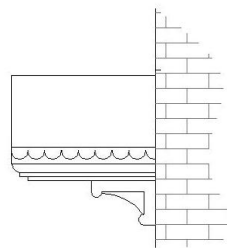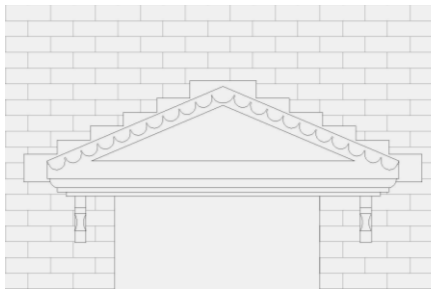

The Internet Shop trading as The Canopy Shop

T: 0345 241 7182 F: 01536 446981 E: sales@thecanopyshop.co.uk www.thecanopyshop.co.uk
Sales Office: The Canopy Shop Unit 13 Earlstrees Court, Earlstrees Industrial Estate, Corby, NN17 4AX